




Plus shower tray installation instructions

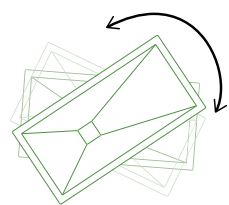


Reversible

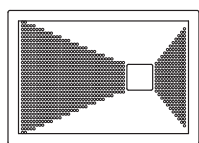


Plus

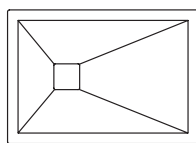


Plus1

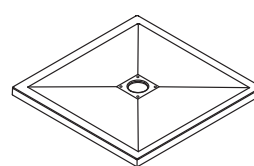

Square

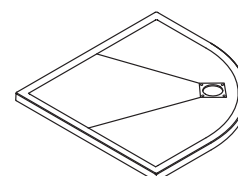


Corner

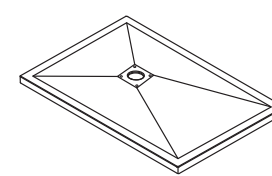


Rectangular


- 1** Place the shower tray on the floor area into the chosen position and mark the maximum overall dimensions (A and B).

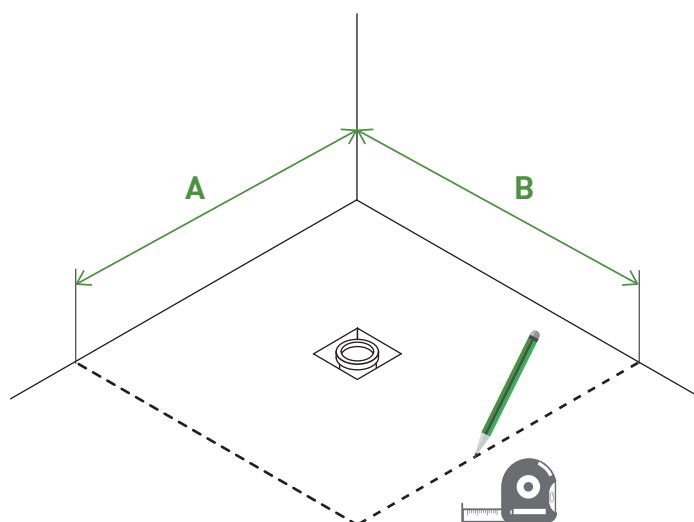


- 2** Place the shower tray ensuring it is perfectly level. Measure the existing distances (C and D) between the wall and the centre of the shower tray waste, in order to facilitate the subsequent installation of the waste fitting. Remove the shower tray and with the help of the previously marked measures connect the waste to the sewage pipe.

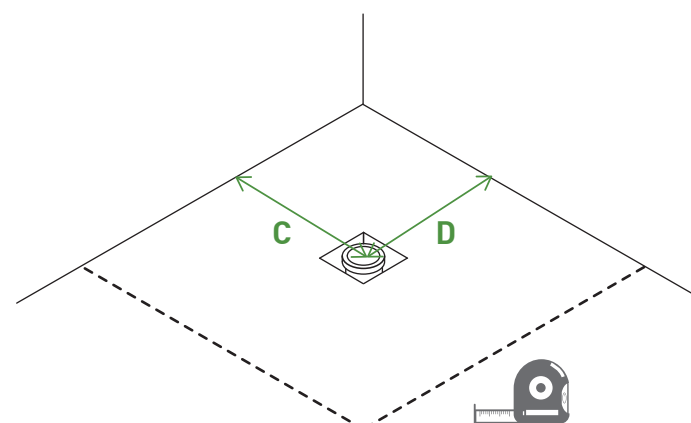


- 3** Place the glue or the cement mortar into the drawn perimeter, in order to make integral the bottom edge of the shower tray with the screed, taking care to use the right quantity for the adjustment at level.

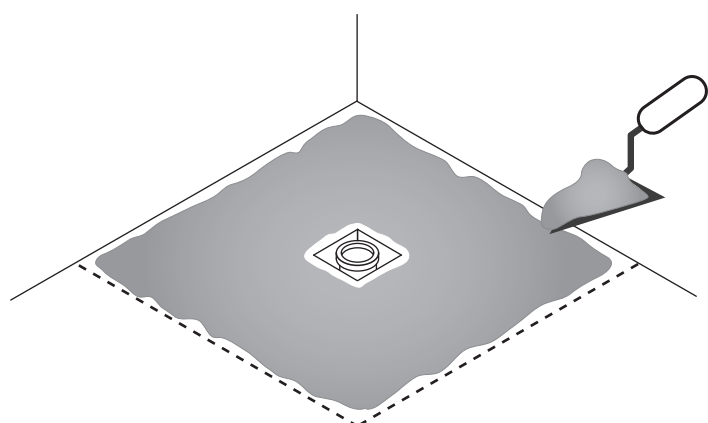

- 4** Carefully lower the shower tray onto the bed of cement mortar, making sure that the floor waste is perfectly coaxial with the shower tray waste hole (make sure the seal of the waste is free of impurities). Check with the spirit level that the shower tray surface is perfectly level.

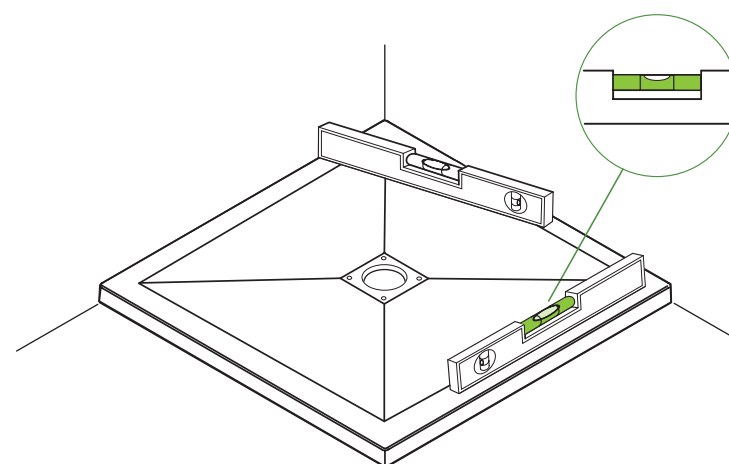

- 5** Proceed with the fixing of the last piece of the waste and trap, following the manufacturer's instructions. Put into place the ceramic waste cover, inserting the special rubber feet into the holes of the shower tray surface, thereby ensuring maximum stability.

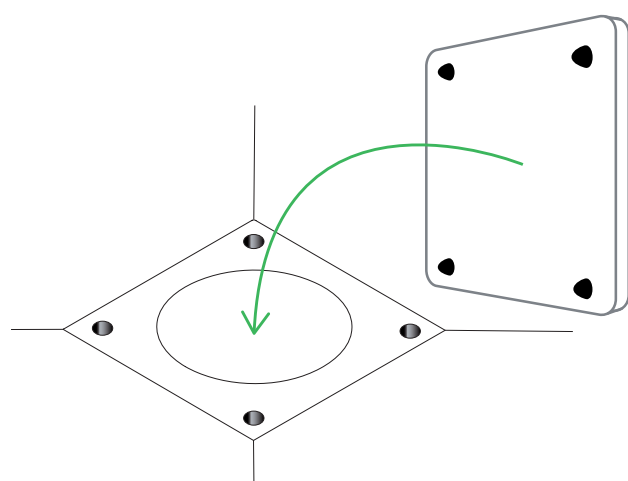

- 6** Apply the elastic silicone along the perimeter of the shower tray, in contact with both the wall and the floor area, so as to completely seal the surfaces.

